

35" Digital Tower Fan with Remote Control



DF0037 / DF0037BL

Batch code:

Please read these instructions carefully before use and retain for future reference

**Before switching on your appliance,
always check for any damage which may have been caused in transit**

CONTENTS

Safety Instructions.....	2-3
Appliance Overview.....	4
Operating Instructions.....	5
Cleaning & Storage.....	5
Fuse Replacement.....	5
Igenix Warranty.....	6-7
Disposal information.....	8

SAFETY INSTRUCTIONS


Please read this user manual carefully to ensure proper use, maintenance and installation.

1. This product is intended for domestic and light office use **ONLY** and not for commercial, industrial or outdoor use.
2. Do not operate the unit with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way. Return to an authorized service facility for examination and repair.
3. This unit should always be kept in an upright position to avoid any damage. Locate the unit on a flat stable surface.
4. Check the voltage of the appliance matches the household voltage, which is located on the rating label.
5. Ensure that the air inlets and outlets are not blocked or covered.
6. Do not place the unit too close to curtains or other objects - min 30cm.
7. Make sure there are no objects near the unit which can prevent it from oscillating.
8. Never insert fingers, pencils or other objects into the unit if the power cord is plugged in, and especially not during the operation. Warn your children against these dangers.
9. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be


made by children unless they are older than 8 years and supervised.



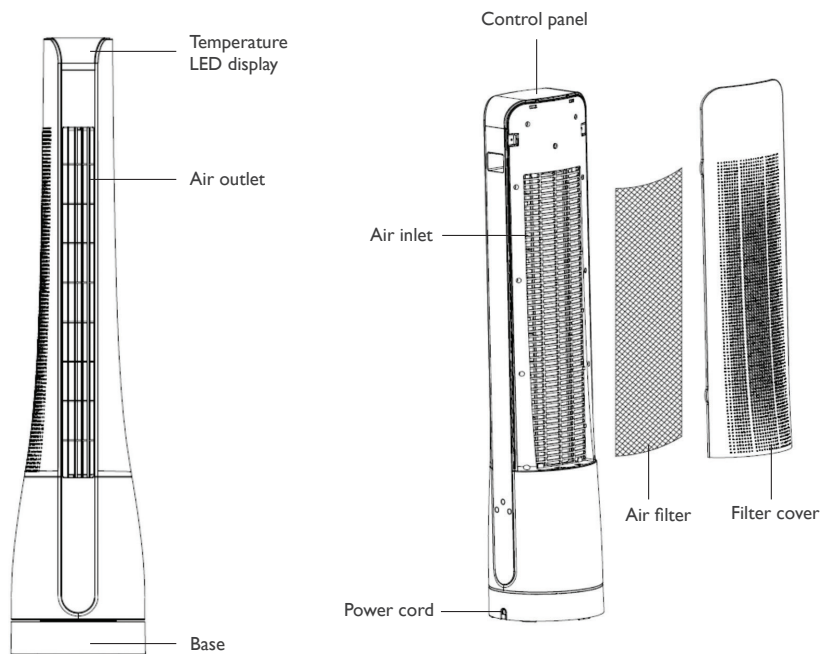


10. Keep the appliance and its cord out of reach of children aged less than 8 years.
11. Children shall not play with the appliance.
12. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
13. Unplug the unit from the socket when you do not use it. Please do not pull on the cord.
14. Do not use the unit near bath, shower, swimming pool or anywhere it could be splashed with water.
15. Do not expose the unit to direct sunlight.
16. The fan should stand upright during operation and never lying on its side.
17. Do not use the unit near flammable or explosive gases.
18. Before cleaning the unit, switch it off and unplug the power cord.
19. Do not leave the unit unattended during operating.
Always unplug the power cord when not in use.
20. To repair the unit, take it to a qualified service engineer. Repairs carried out by unqualified people may cause damage to the unit or injury to persons or property and void the warranty.

APPLIANCE OVERVIEW

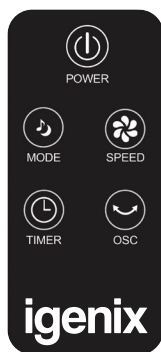

Control Panel and Remote control Symbols



	Oscillation Function
	Breeze Mode: Normal, Natural (☾) and Sleep (☾)
	Timer: up to 8 hours Continuously press the button for 3 seconds, the time will increase in intervals of 1 hour (60 mins).
	Speed setting: High, Medium, Low
	Power: On and off control

Functions

1. Take the unit out of the box, removing any packaging. To activate the remote control, remove the pull tab from the battery compartment.
2. Connect the power cord to a plug socket.
3. Press the buttons on the control panel as follows:
 - POWER: Press the button to turn the unit on or off.
 - SPEED: Set the desirable fan speed (Hi, MED, LOW).
 - MODE: Press the button to choose Normal, Natural (☾) or Sleep mode (☾).

- **TIMER:** Press the button to activate the timer function (0h – 8h). The set time will appear on LED Display. Continuously press the button for 3 seconds, the time will increase in 1 hour (60 mins) intervals.
 - **OSC:** Press the button to activate or deactivate the oscillation of the fan.
4. The Temperature LED display shows the room temperature, by pressing the “MODE” button for 3 seconds will make the brightness of the LED display reduce by half.

Description of different Breeze Modes:

NORMAL MODE:

Constant wind speed as selected from your desired Speed Setting.

NATURAL BREEZE MODE:

The wind speed will randomly cycle through the fan speed settings from High, Medium, Low and OFF to simulate a natural breeze.

SLEEP BREEZE MODE:

The wind speed will randomly cycle through the fan speed settings to simulate a comfortable sleeping breeze.


Cleaning and Storage

- Before cleaning the unit turn the power off by pressing the POWER button, wait a few minutes and then unplug the power cord from the plug socket.
- Clean the unit using a damp cloth moistened with a mild soap solution, and then wipe it using a dry cloth.
- Gently remove the Filter Cover, than remove the Air Filter.
- Rinse the Filter under running water and dry it with a soft cloth.
- Replace the Air Filter and Filter Cover.
- We recommend cleaning the unit once a month.
- If you don't use the unit for a long period of time, please turn the unit off, unplug the power cord from the socket and then store in a dry, cool and safe place.
- Do not expose the unit to direct sunlight.
- Remove the batteries from the remote control and keep them safe.

MAINS PLUG FUSE REPLACEMENT

Fuse Replacement (Class I)

This appliance must be eathed. Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.

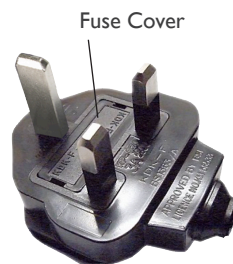



Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department
38 Bluestem Road, Ransomes Europark
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the Batch Code beginning '5' and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.

igenix

Thank you for choosing Igenix

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **www.igenix.co.uk**

To register your product, please complete all sections of the form below and return to us at the following address: Igenix, 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR.

Alternatively you can visit the Igenix website and complete the form online.

Customer Details:

Title: _____ First Name _____ Surname: _____

Address: _____

Post Code: _____

Email: _____

Telephone: _____

Product Information:

Product Code (Beginning IG or DF): _____ Product Description: _____

Batch Number (Beginning 5): _____ Serial Number (if applicable): _____

Date of Purchase: _____

Retailer Name: _____

Retailer Location: _____

Please tick here to confirm you have read and accept our Terms & Conditions

Please tick here if you DO NOT wish to receive marketing information from us

Customer Signature: _____ Date: _____

DISPOSAL INFORMATION



The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

igenix

38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR

Tel. 01473 271 272

Disclaimer: Igenix operate a policy of continual improvement and development.
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.
All diagrams and images shown in this manual are for illustration purposes only.